TRANSISTOR PRINCIPLES : FETs & PETs

Field Effect: Screening

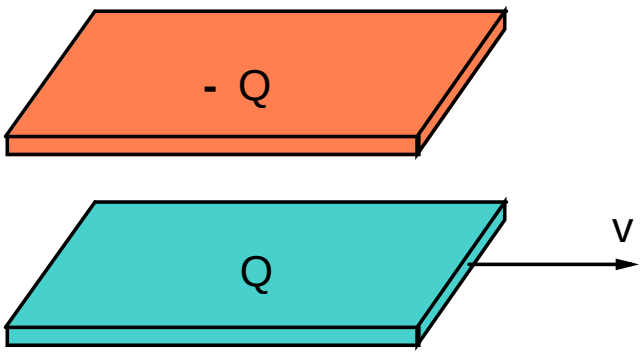

Potential Effect: Control of a cathode work function

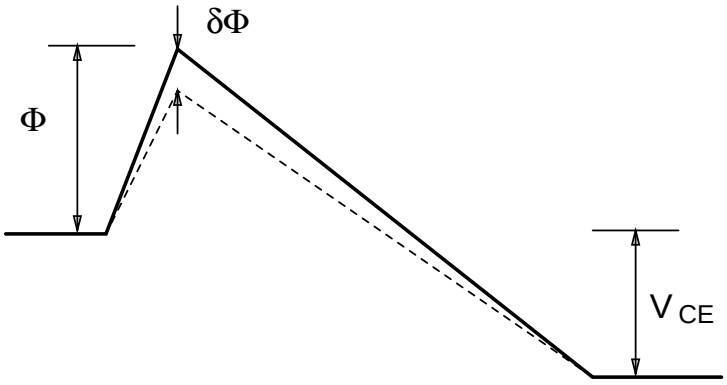

FETs:

$$I = \frac{Q\,v}{L}$$

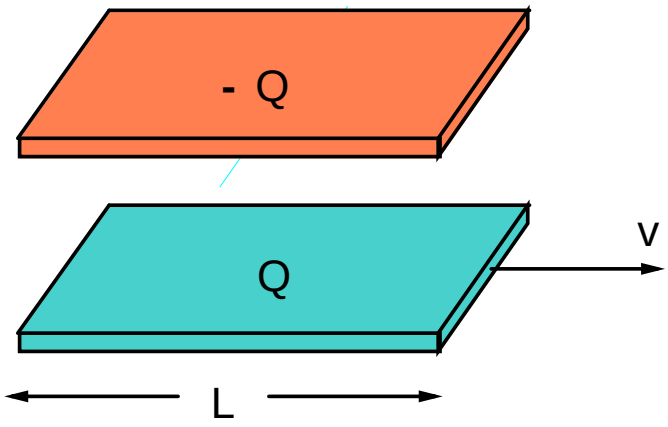

"Biblical" principle:

Q for Q
I for I

"Transit time" limitation :

$$\tau > \frac{Q_{in}}{I_{out}} = \frac{L}{v}$$

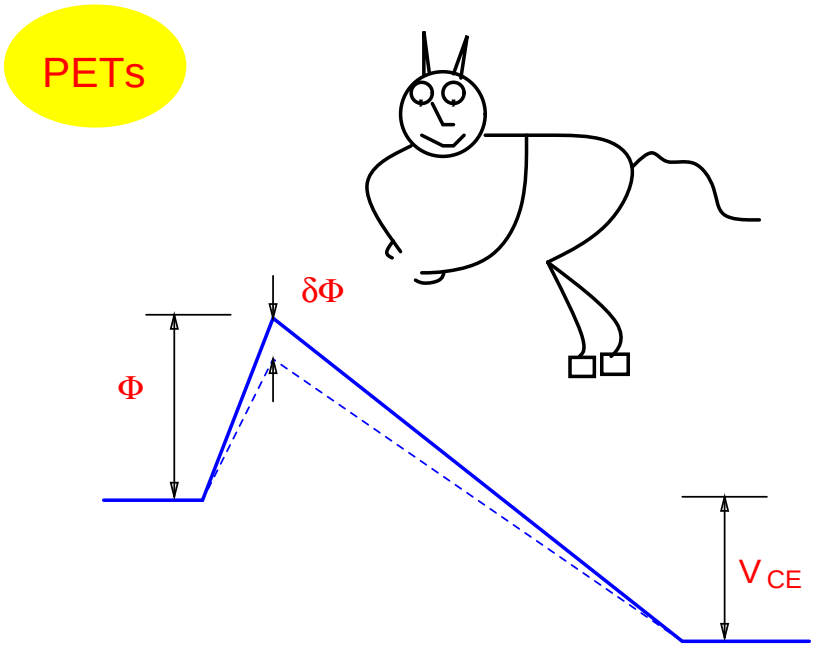

$$I \sim e^{-\Phi/kT}$$

$$\delta\Phi \sim \delta Q_{in} \rightarrow \tau \sim I^{-1}$$

Speed increases with current until exponential law fails at high currents

PET → FET (space-charge effect)

τ limited by transit time across

Charge Injection Transistor (CHINT)

Operating principle: **Control of cathode temperature**

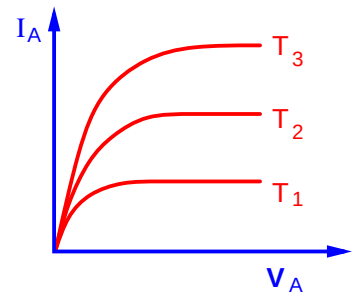

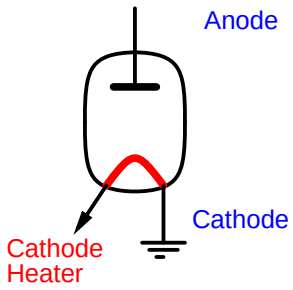

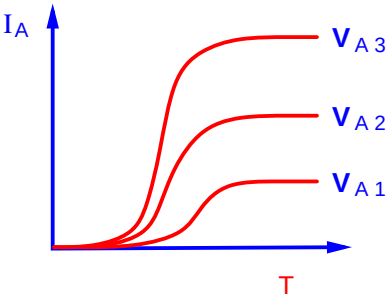

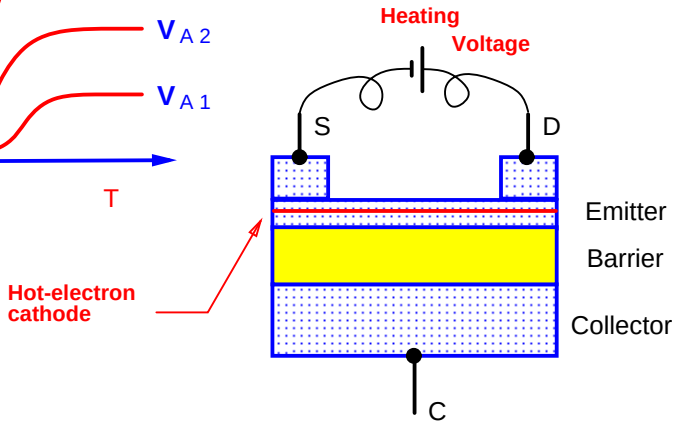

Ballistic Electrons & Hot Electrons

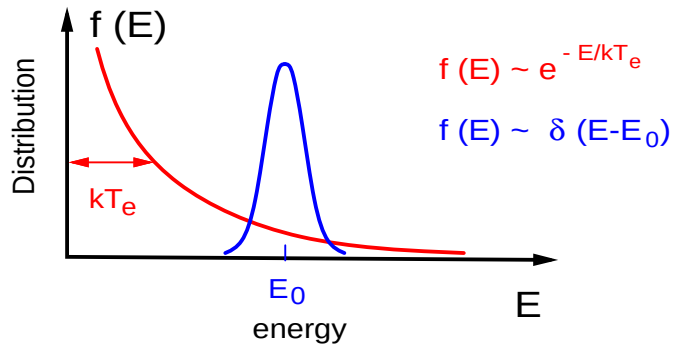

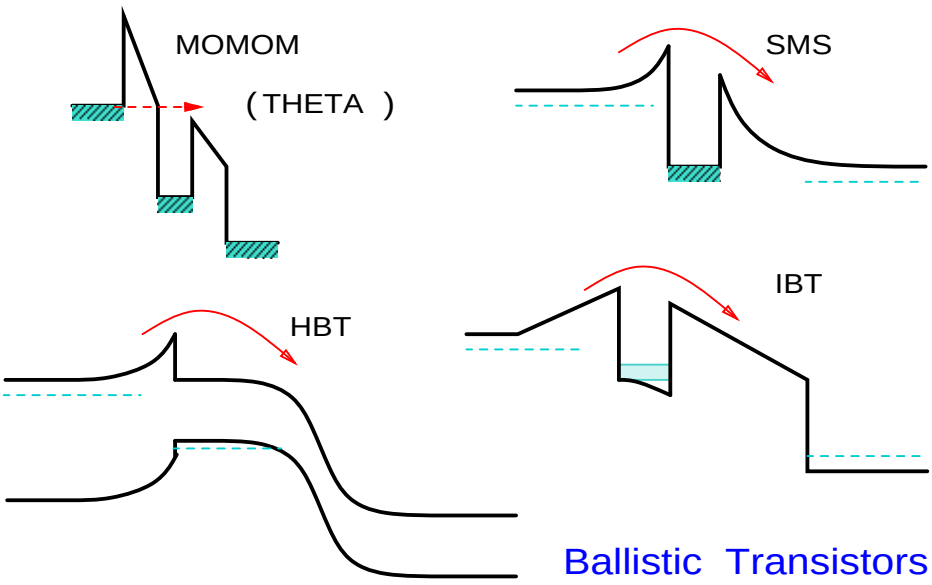

Ballistic Transistors

Real Space Transfer

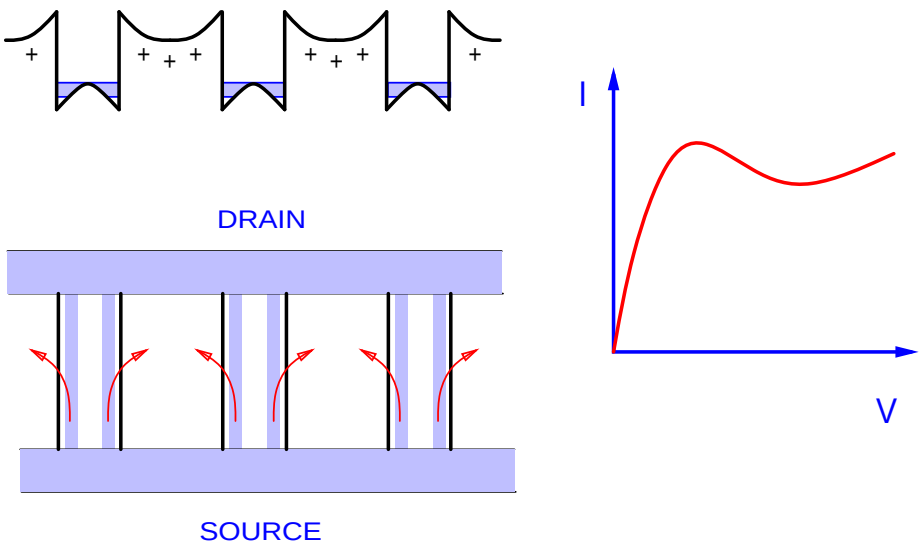

Ballistic Electrons

& Hot Electrons

$f(E) \sim e^{-E/kT_e}$

$f(E) \sim \delta(E-E_0)$

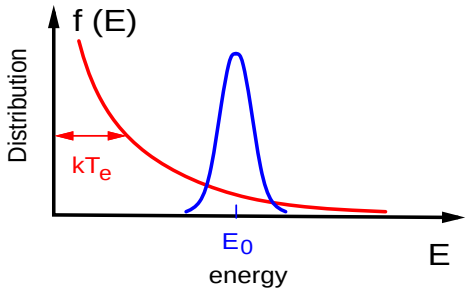

CHINT Structures

1984:

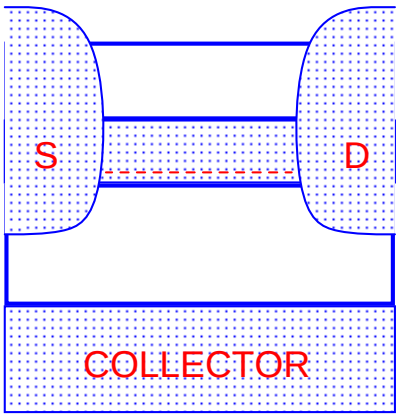

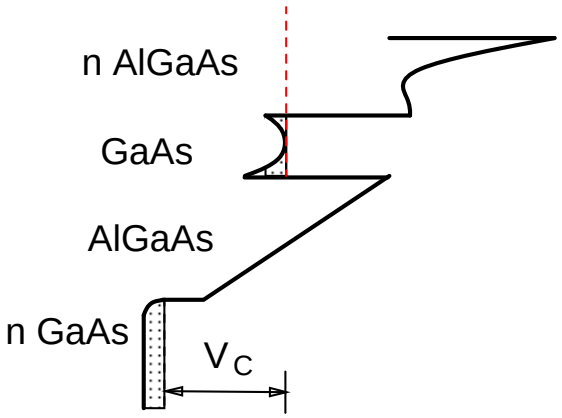

1990:

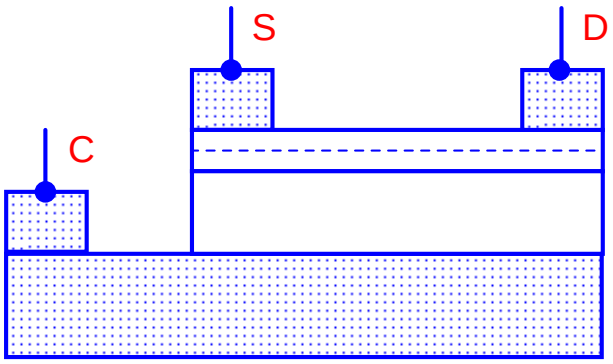

	300 Å	InGaAs	n^+
Emitter	500 Å	InGaAs	n^-
Barrier	2000 Å	InAlAs	u
Collector	~ 1 µm	InGaAs	n^+

InGaAs/InAlAs CHINT

P.Mensz, P.Garbinski,
A.Cho, D.Sivco, S.Luryi
Appl. Phys. Lett. **57**, 2563 (1990)

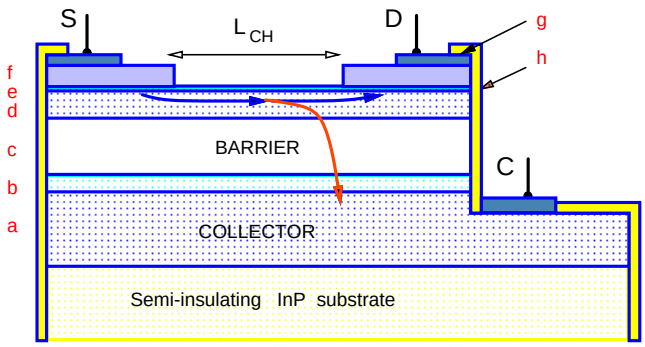

a: 5000 Å InGaAs n^+ (Si:10^{19})
b: 500 Å InGaAs n^- (Si:10^{17})
c: 2000 Å InAlAs u
d 500 Å InGaAs n (Si:10^{16})
e: 25 Å InAlAs n^+ (Si:10^{19})
f: 200 Å InGaAs n^+ (Sn:10^{20})
g: 500 Å Ti / 1000 Å Au
h: Si_3N_4

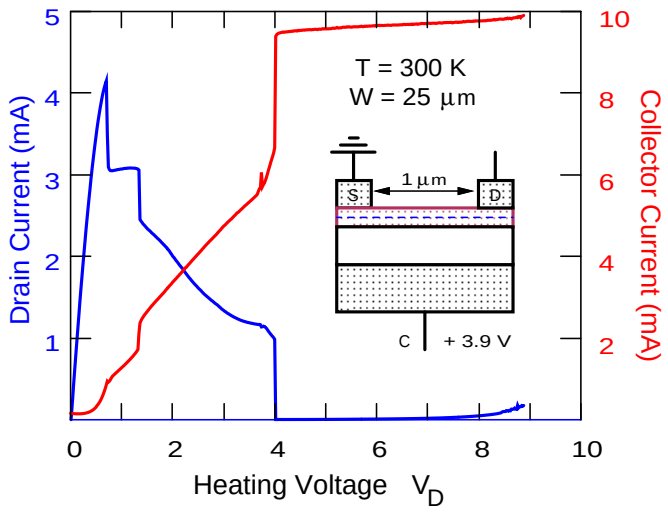

Hot-Electron Instabilities in CHINT

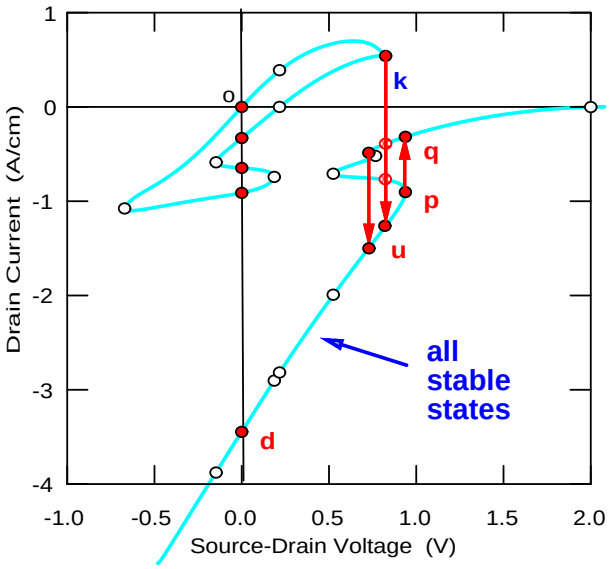

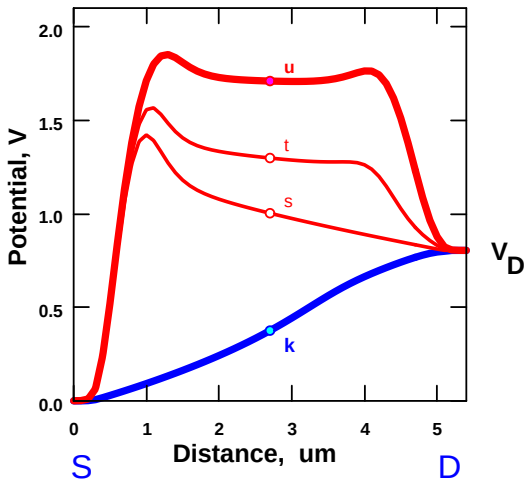

Broken Symmetry States in CHINT

S. Luryi and M. Pinto
Phys. Rev. Lett. **67**, 2351 (1991)

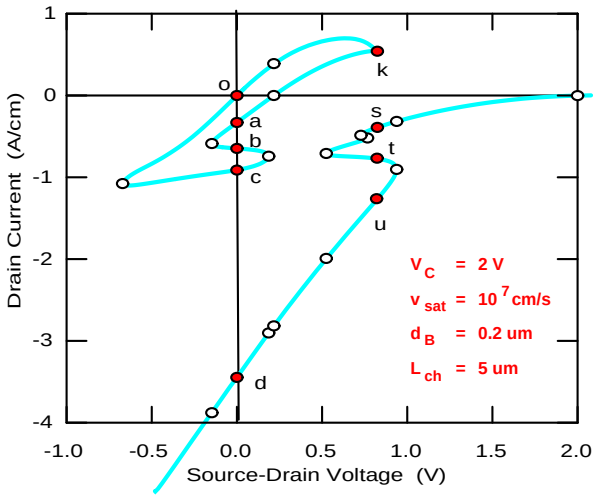

Multiply-connected
I - V characteristics

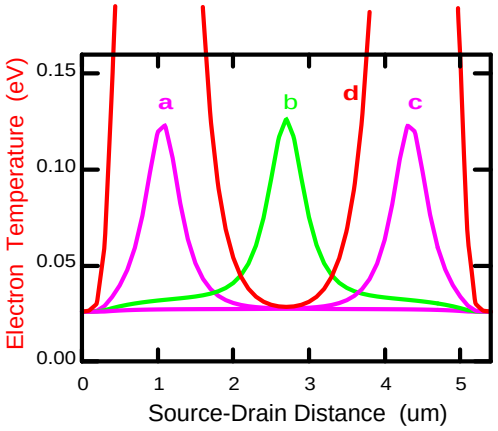

Anomalous collector-controlled states at $V_{DS} = 0$

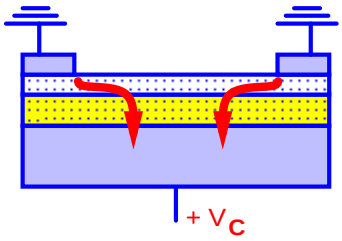

Broken Symmetry States in CHINT

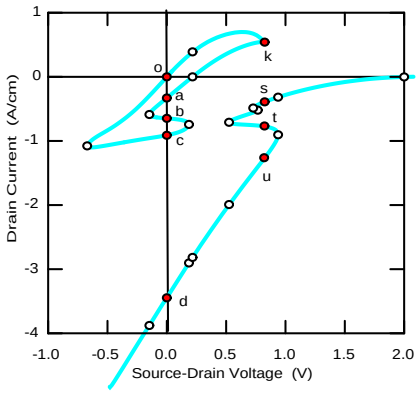

Anomalous collector-controlled states at $V_{DS} = 0$

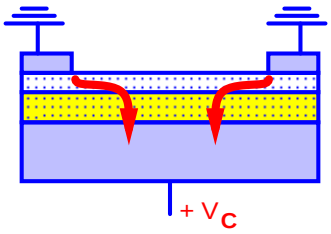

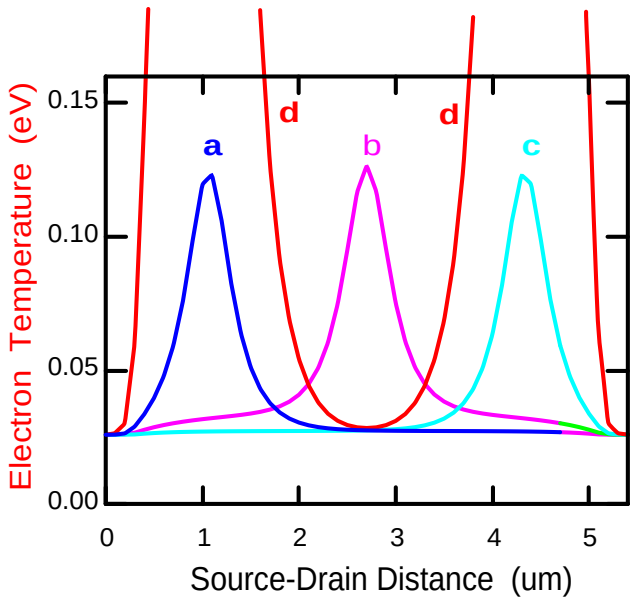

Evolution of non-stationary states

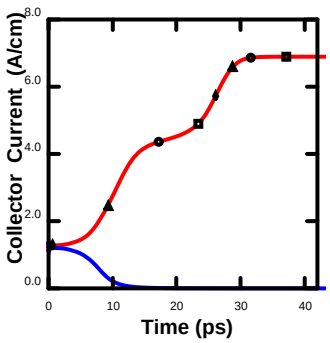

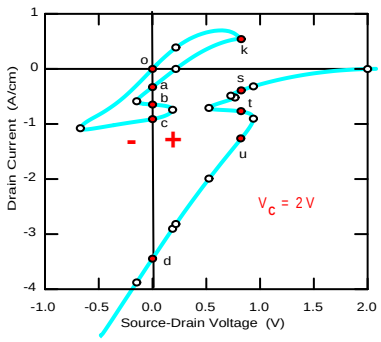

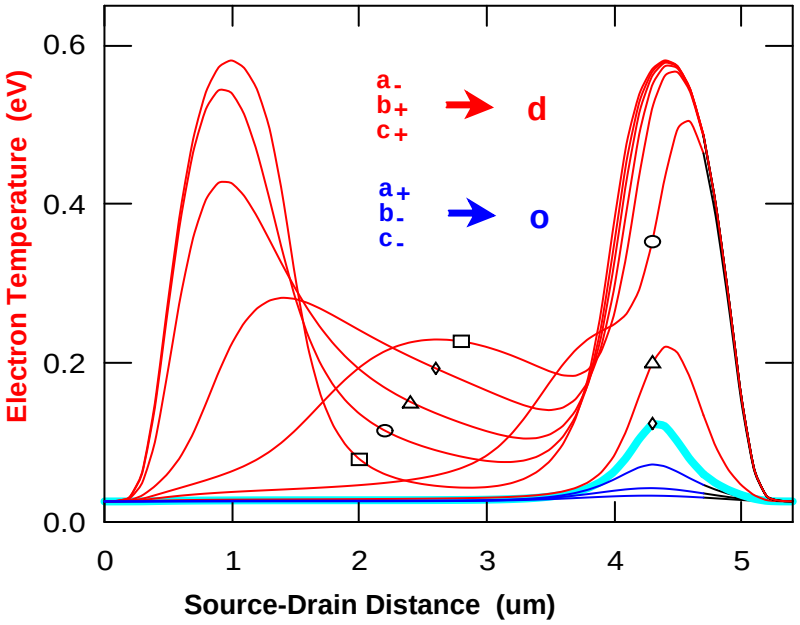

Realization of anomalous states by rapid ramping of V_C

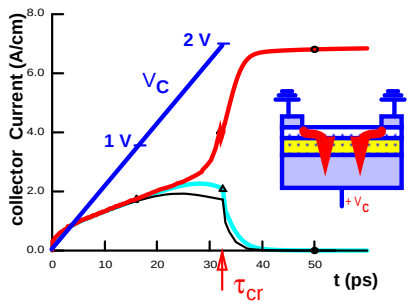

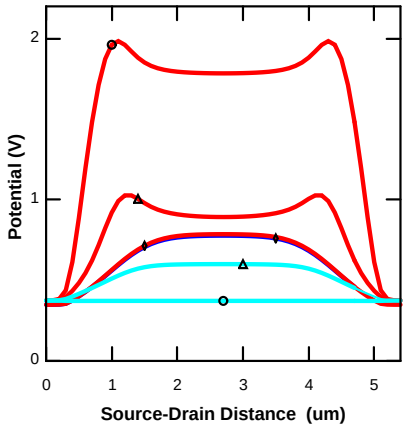

Critical ramping speed is determined by the rate at which the increasing fringing field **(~ dV_C/dt)** is screened by channel electrons **(~ v_{sat})**

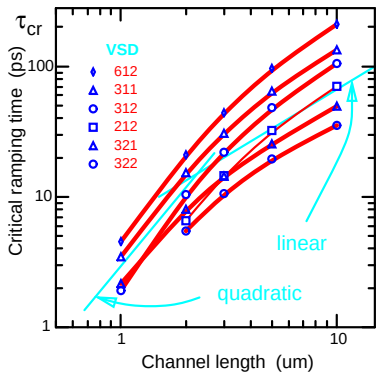

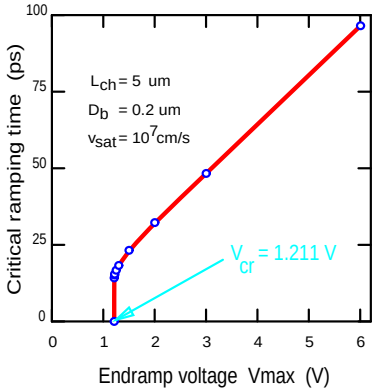

Formation of Hot-Electron Domains

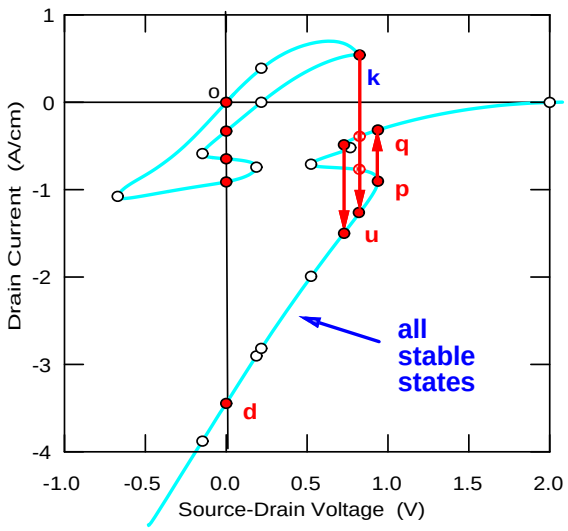

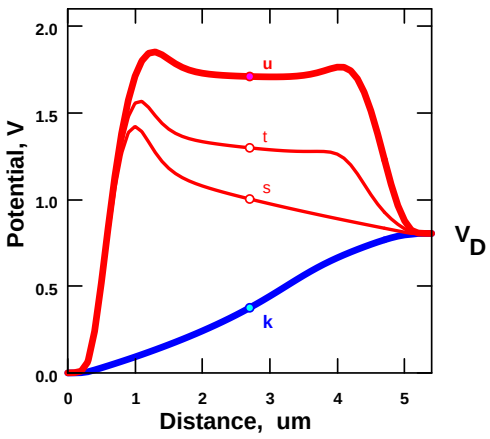

Microwave Studies of CHINT

P.Mensz, H.Schumacher, P.Garbinski, A.Cho, D.Sivco, S.Luryi
IEDM Tech. Digest, p. 395 (1990)

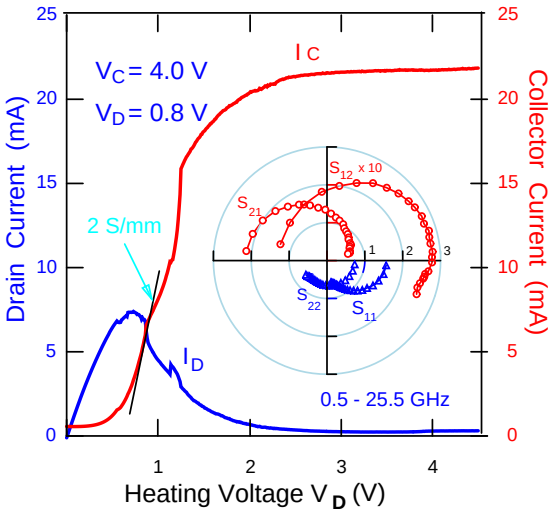

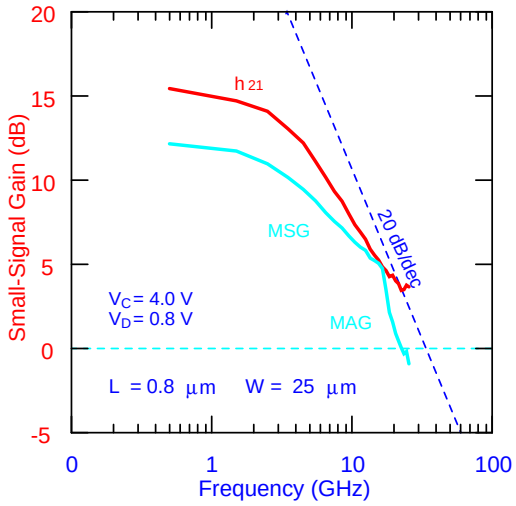

Microwave Performance of top-collector CHINT

G. Belenky, P. Garbinski, P. Smith, S. Luryi
A. Y. Cho, R. A. Hamm, D. L. Sivco (1993)

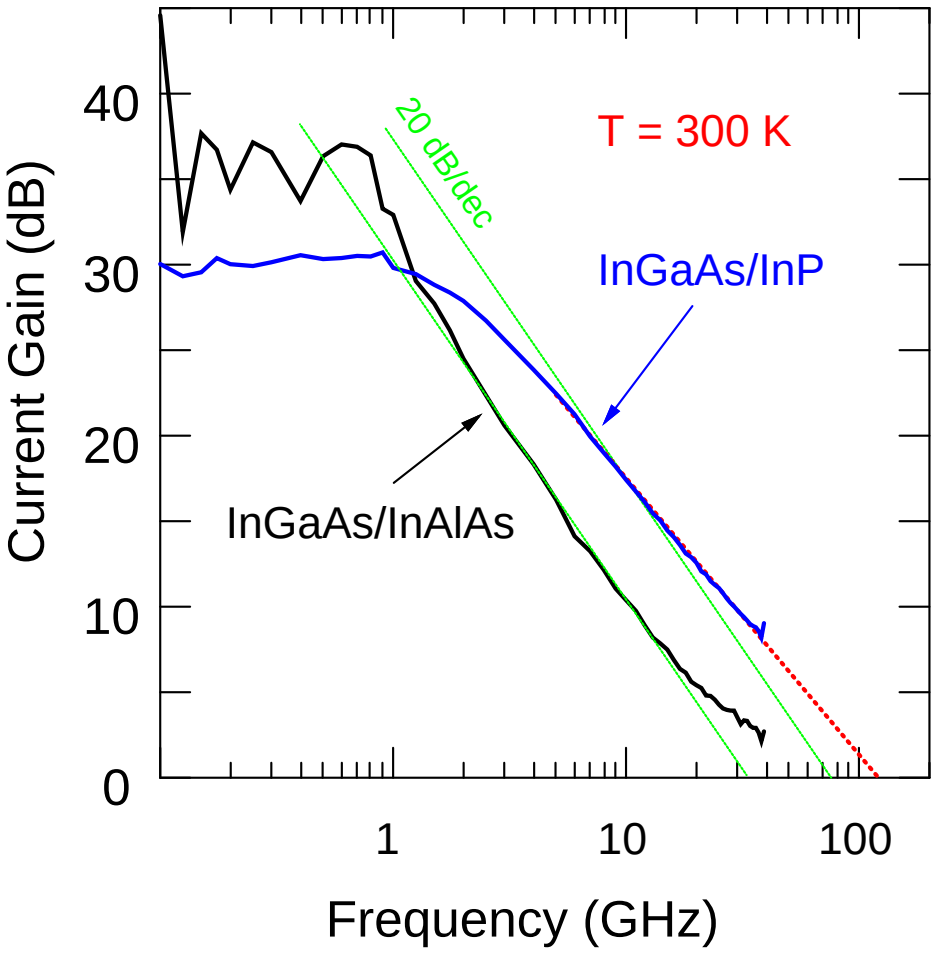

Speed Limits of CHINT

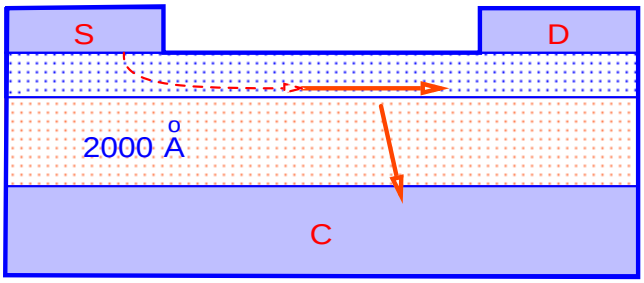

Limiting mechanisms:

a. Establishment of hot-electron ensemble

Phonons: ~ 1 ps
e-e interaction < 1ps
(if concentration not too low)

b. Charging time

transit over high-field regions

~ 2-3 ps f_T ~ 80 - 50 GHz

c. Parasitic **C-D** capacitance

presently dominates

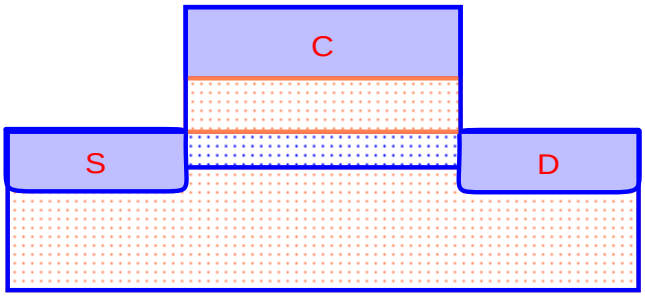

Collector-top
CHINT preferable

"FET like" but
not limited by
time of flight S->D
in small-signal operation

K. Maezawa and T. Mizutani,
Jpn. J. Appl. Phys. 30, 1190 (1991)

CHINT vs FET

Physical Picture

Hot electron ensemble
equilibrates via e-e interaction

RST is due to electrons in high-energy tails
of the distribution function

Tails are repolutated
"instantaneously" from
the main part of distr.
(at high enough conc.)

The effective temperature
of electrons is determined
by energy balance

T_e can be very high,
more than 1000 K

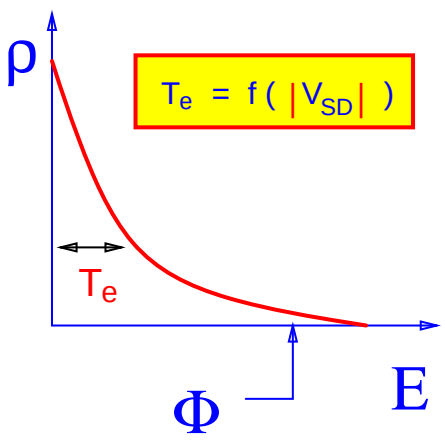

The fundamental symmetry
of charge injection by RST

Can interchange
S ⟷ D
collector current
will not change !

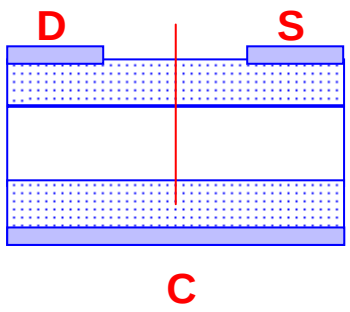

CHINT logic

S.Luryi, P.Mensz, M.Pinto, P.Garbinski, A.Cho, D.Sivco
Appl. Phys. Lett. **57**, 1787 (1990)

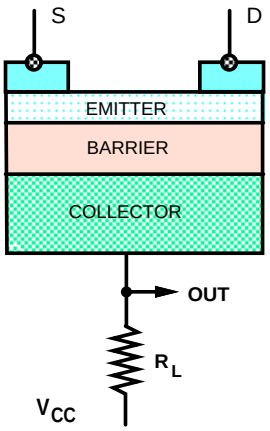

S	D	I_C	OUT
0	0	low	1
0	1	high	0
1	0	high	0
1	1	low	1

XNOR (S , D)

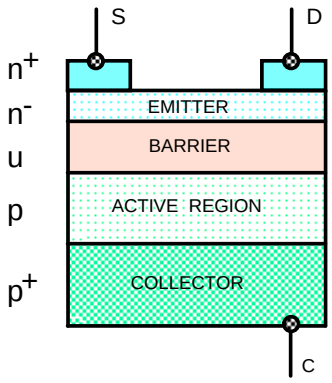

L = XOR (S , D)

Light-Emitting CHINT

S. Luryi, Appl. Phys. Lett. 58, 1727 (1990)

RST of electrons
into a complementary collector

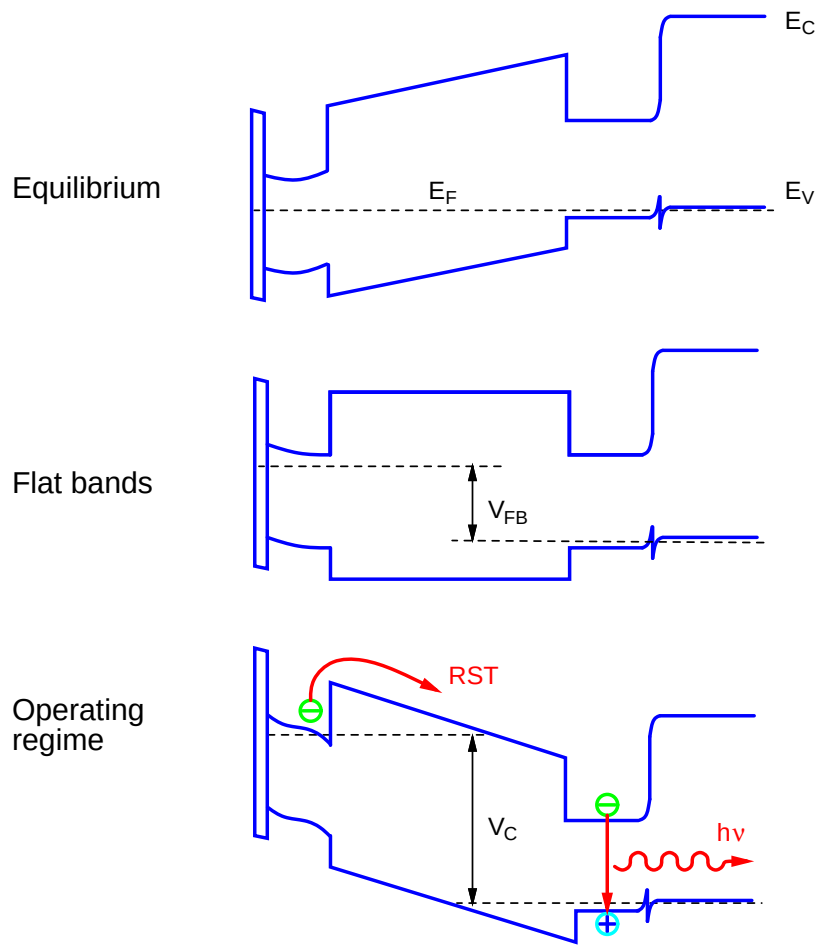

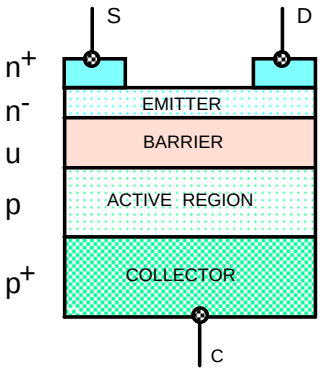

Light-emitting logic RST device

L = XOR (S , D)

Mastrapasqua et al
Appl. Phys. Lett. 60, 2415 (1992)
IEEE TED-40, 250 (1993)

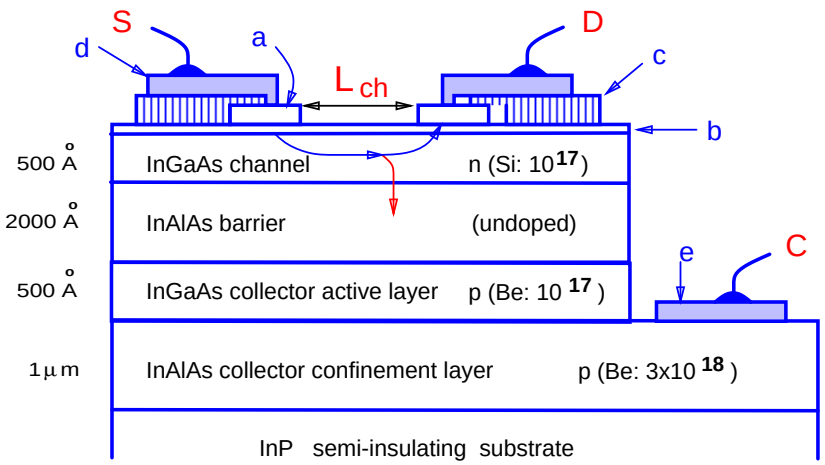

a: 200 Å InGaAs, n (Sn: 10^{20})
b: 25 Å InAlAs, n (Sn: 10^{19})
c: 2500 Å Si_3N_4
d: 300 Å Ti / 1800 Å Au
e: 800 Å AuBe / 2000 Å Au

Light = xor (S , D)

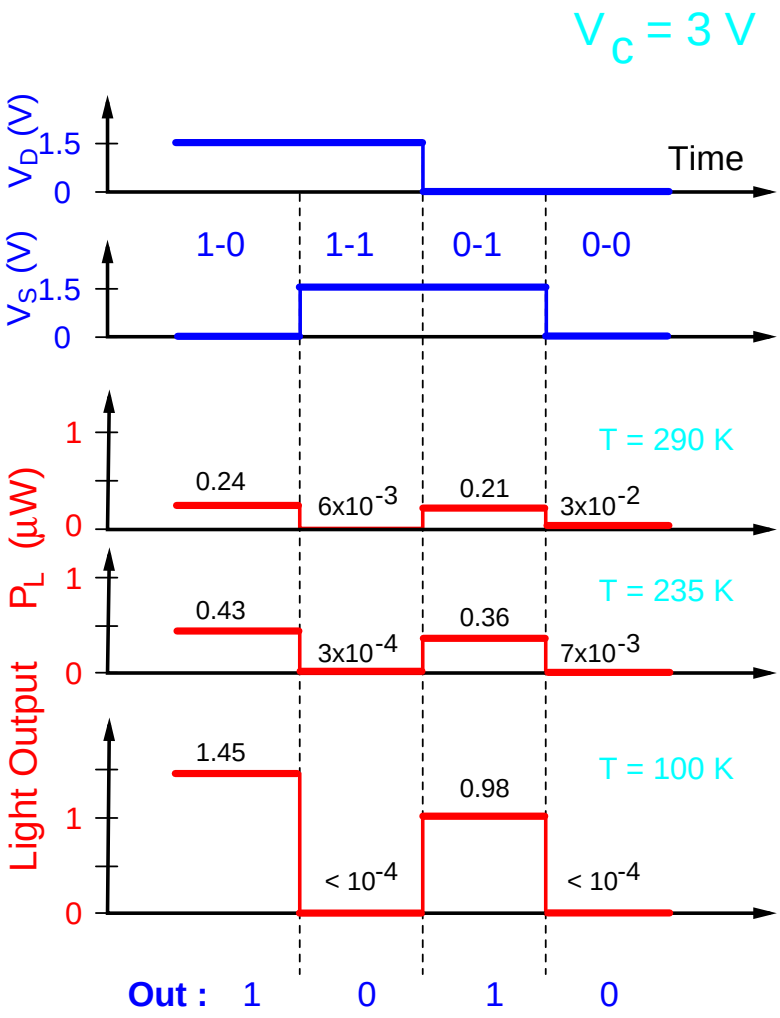
V C = 3 V
V D (V)
1.5
0
Time
1-0
1-1
0-1
0-0
V S (V)
1.5
0
P L (µW)
1
0
0.24
6x10-3
0.21
3x10-2
T = 290 K
1
0
0.43
3x10-4
0.36
7x10-3
T = 235 K
Light Output
1
0
1.45
< 10-4
0.98
< 10-4
T = 100 K
Out : 1 0 1 0

Current = xor (S , D)

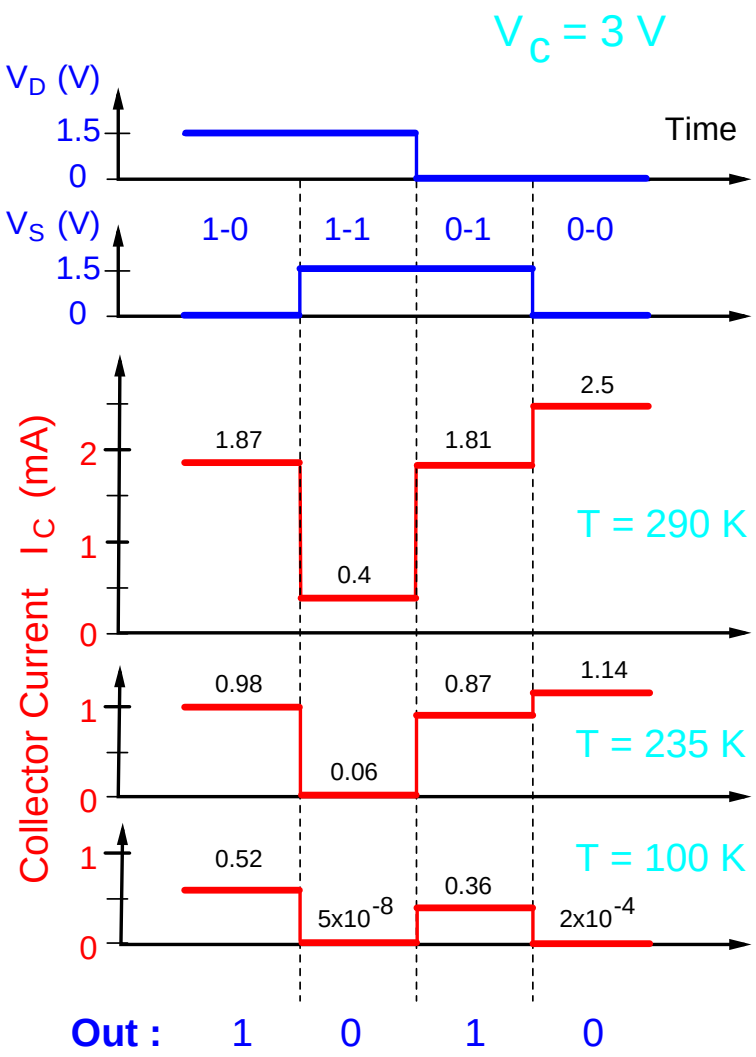

Band alignment in InGaAs/InAlAs/InGaAs n-i-p heterostructure

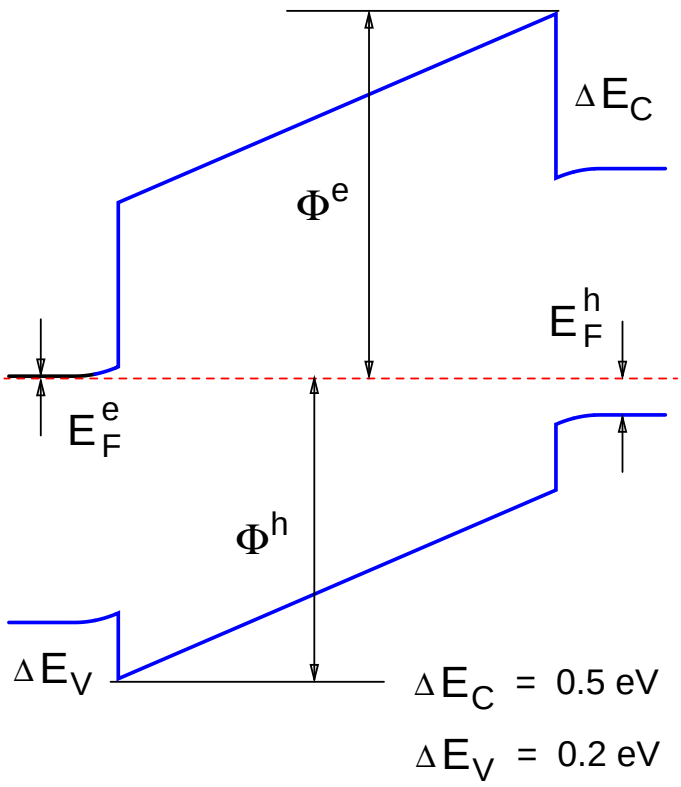

Leakage: holes from collector
RST: electrons from emitter channel

"Frequency Doubler"

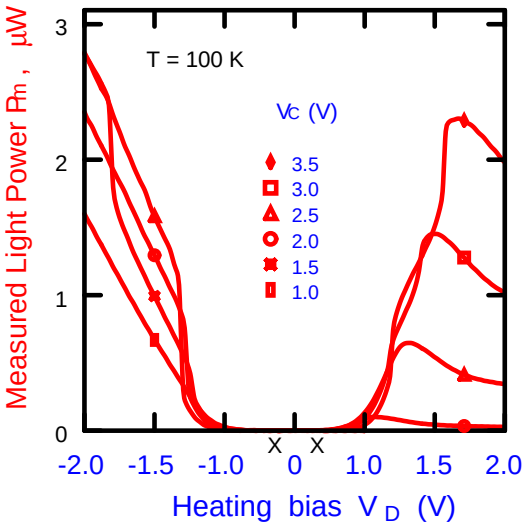

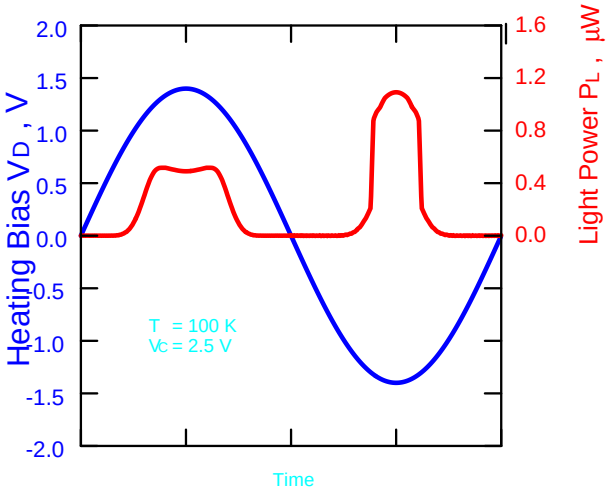

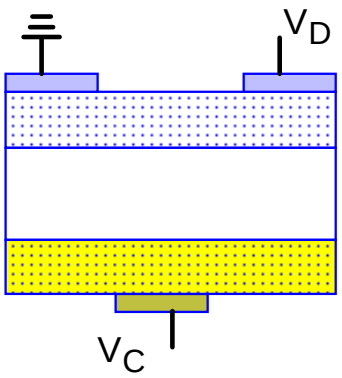

Symmetry under interchange does not imply equivalence between + and - V_D

When $V_D < 0$
the D electrode acts as a source, gated by the collector voltage

Symmetry of the CHINT

$$[\,V_D\,,V_C\,] \equiv [-V_D\,,(V_C - V_D)]$$

reflection plane

Collector current invariant under interchange

S ⟷ D

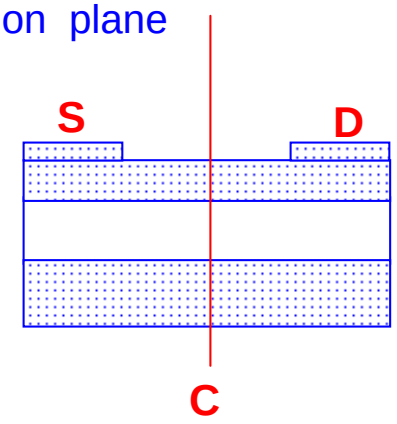

a similar symmetry exists in FET:

$$[\,V_D\,,V_G\,] \equiv [-V_D\,,(V_G - V_D)]$$

but not so important, because

G is not the output terminal

CHINT logic

S. Luryi and M. Pinto
US Patent **4,999,687**

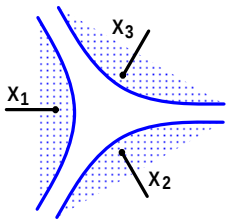

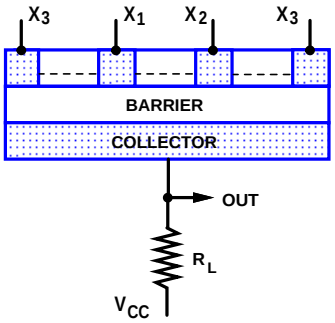

OUT = NORAND (X_1, X_2, X_3)

$$= (X_1 \cap X_2 \cap X_3) \cup (\bar{X}_1 \cap \bar{X}_2 \cap \bar{X}_3)$$

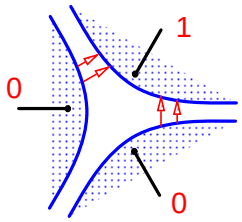

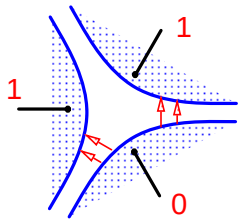

X_1	X_2	X_3	OUT	
0	0	0	1	NOR
1	0	0	0	
0	1	0	0	
1	1	0	0	
0	0	1	0	AND
1	0	1	0	
0	1	1	0	
1	1	1	1	

Light-Emitting Device with OR-NAND Logic Function

M. Mastrapasqua et al., IEDM-92, p. 659; IEEE TED-40 (Aug, 1993)

L = OR (1 , 2) if 3 = low

L = NAND (1 , 2) if 3 = high

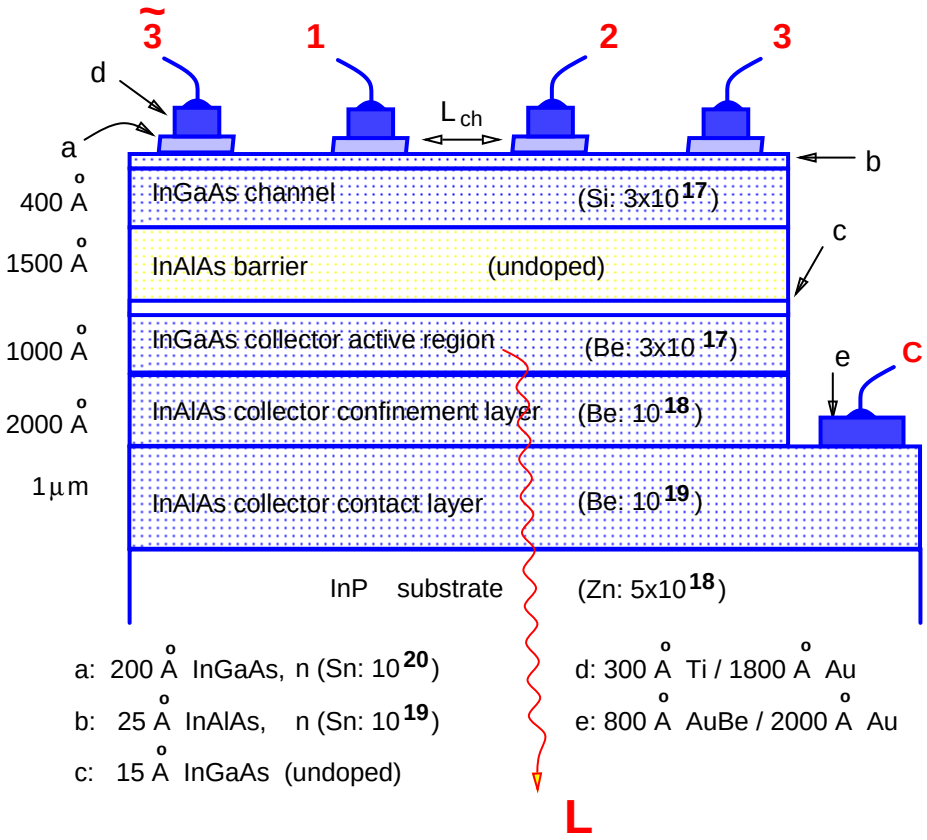

a: 200 Å InGaAs, n (Sn: 10^{20})

b: 25 Å InAlAs, n (Sn: 10^{19})

c: 15 Å InGaAs (undoped)

d: 300 Å Ti / 1800 Å Au

e: 800 Å AuBe / 2000 Å Au

OR-NAND Logic

input voltages: "0" = 0, "1" = 3 V

T = 300 K

V_C = 2.4 V

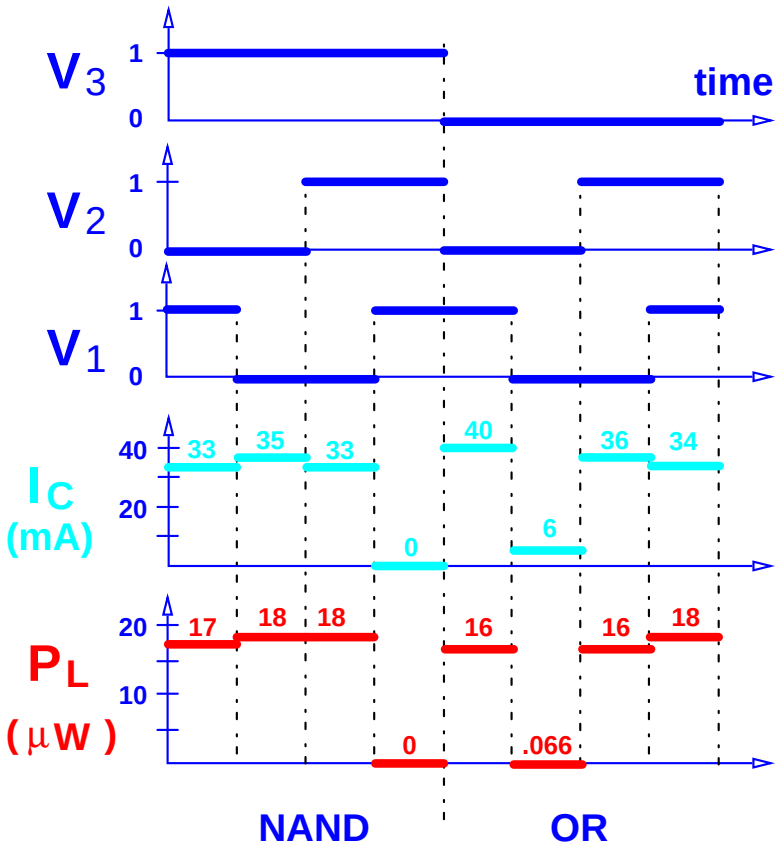

Cancellation of symmetry break by off-center trench misalignment

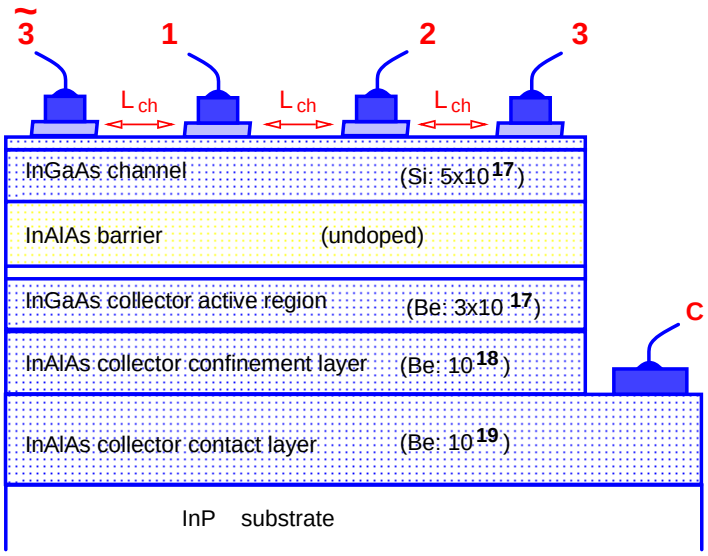

input V_1, V_2	0, 1	0, 0	1, 0	1, 1
or $V_3 = 0$	1 → 2 3 → 2		3̃ → 1 2 → 1	3̃ → 1 3 → 2
nand $V_3 = 1$	1 → 3̃ 1 → 2	1 → 3̃ 2 → 3	2 → 1 2 → 3	

"working" channels

Characteristics of nearest pairs of electrodes

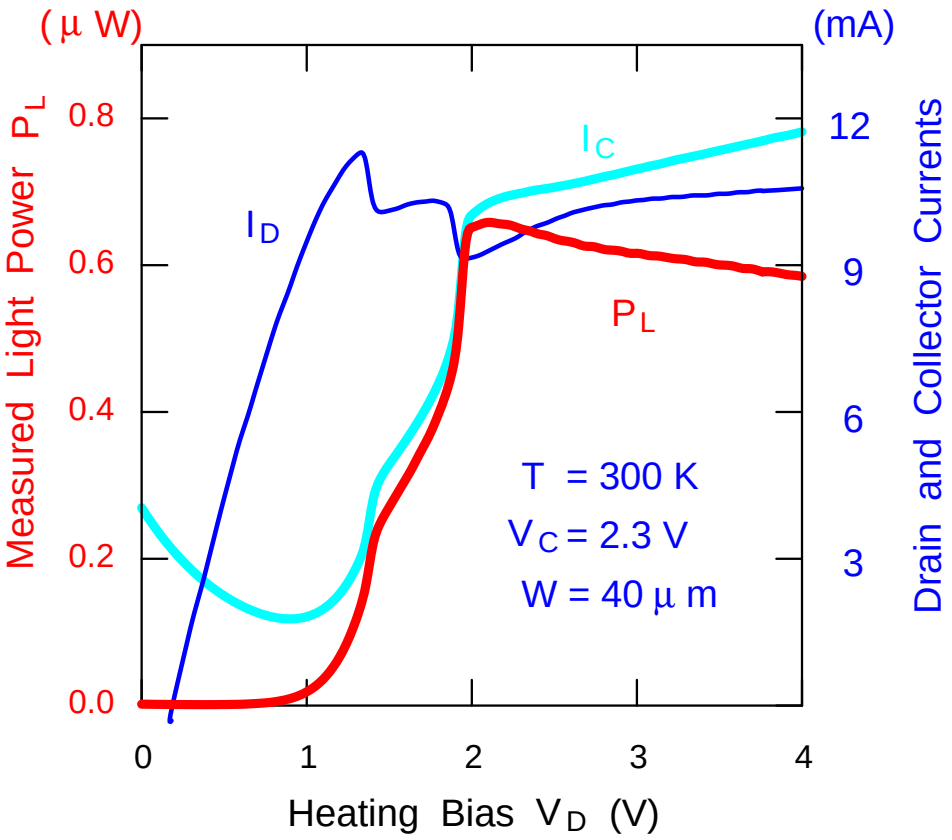

Leakage vs RST

vastly different
radiative efficiency
(InGaAs/InAlAs)

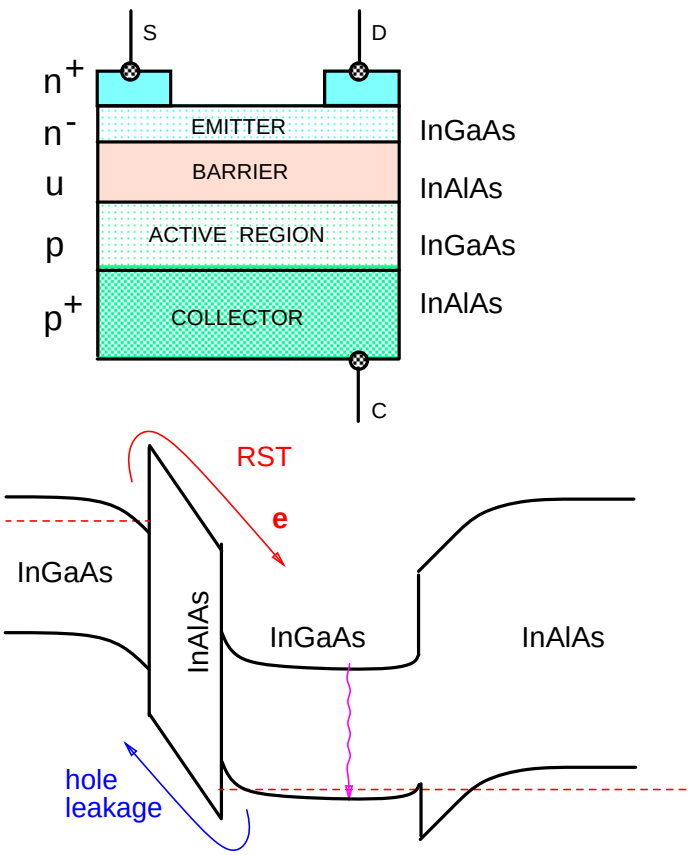

holes injected in the channel recombine non-radiatively

In contrast: InGaAs/InP devices exhibit
similar electrical and optical behavior

Physics with CHINT

Top collector complementary and unipolar devices

- Microwave studies: slow roll-off at high frequencies
- Electroluminescence spectra of
  hot electron-hole plasma in active layer
- Hot-carrier thermometer

Hot-electron instabilities

- Broken symmetry
- Collector-controlled states
- Formation of hot-electron domains
- Multiply-connected IV

Impact ionization studies

- RST of secondary holes from the channel

Noise studies

- Space-charge smoothing of shot noise ?

...

Lot of fun

Real-space transfer of secondary holes

"normally-on" channel

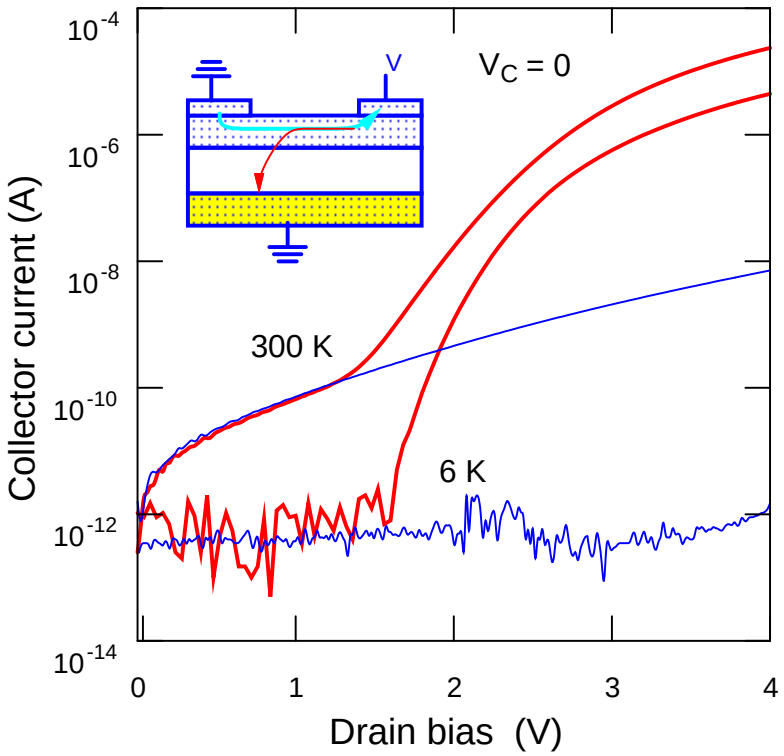

band diagram near the source

Holes, impact-ionized near the drain, accelerate toward the source and undergo RST

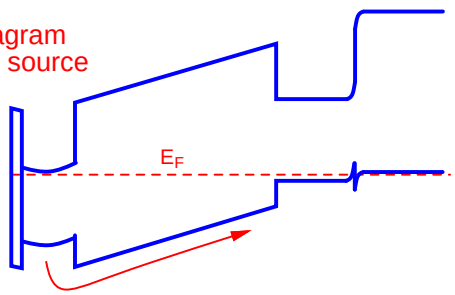

Summary

Transistor Principles

- PETs & FETs
- Ballistic and Hot electrons
- Real Space Transfer
- CHINT

Charge Injection Logic

- Symmetry of CHINT
- Multi-terminal logic elements
- NORAND

Light emitting RST devices

- Complementary CHINT
- InGaAs/InAlAs implementation
- ORNAND

Future

- More fun
- Reprogrammable circuits
- Self-organizing systems ?
- Logic lasers
- Massively parallel systems